



Netzhalter Typ >>2000<< aus Kunststoff, schwarz

Bitte setzen Sie alle 30-40 cm je zwei Haken im Abstand von 15mm gleichmäßig in die Profilnut. Ein Netzhaken mit Öffnung nach unten und einen mit Öffnung nach oben (bzw. rechts oder links). Somit ist gewährleistet, dass Netze mit 3mm Materialstärke exakt in den Haken befestigt werden können.

Die Kunststoff Netzhaken werden mit einer Zange in die Profilnut eingedreht. Netzhaken bitte nur in dieser Richtung über die abgerundete Ecken drehen (siehe Skizze)

"POWER PRESS" Netzbefestigung

Legen Sie die Randschnur des Netzes in die untere Profilkammer. Anschließend nehmen Sie alle 15cm einen "POWER PRESS" und drehen diesen mit einer Wasserpumpenzange in die Kammer, so dass das Netz nicht mehr herausfallen kann.

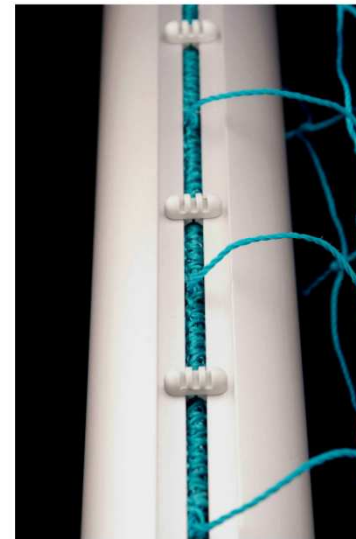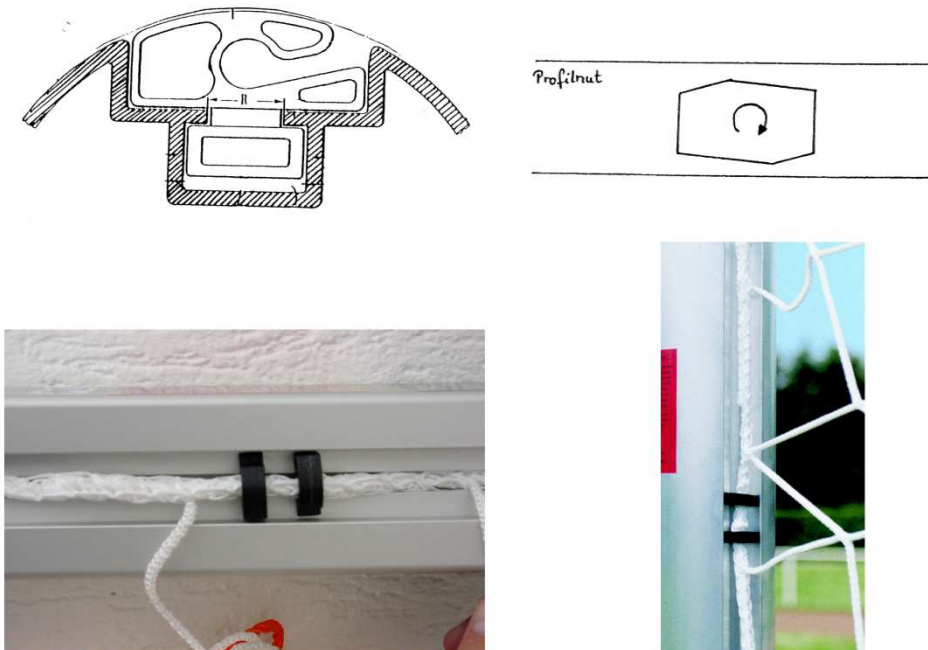

Net hook Type >>2000<< made of plastic, colour black

Please distribute equally along the profile two hooks 15mm apart from each other. One with opening face to top and one to bottom (or right/left). In this way it is guaranteed that the nets are unable to fall out of the hook.

The plastic net hooks will be turned into the profile slot with a tongs. Net hooks only turn in direction od rounded edges (see drawing).

Put the end of the net into the profile.
Then take every 15cm a "POWER PRESS" and turn it into the profile with a water pump pliers so that the net cannot fall out.